

# PARTS LIST

for



## AUTOMATIC WASHER

**MODEL  
LA8800XTW0**

▲W—White, N—Almond,  
F—Toast, M—Platinum,  
G—Golden Harvest



FOR CUSTOMER SATISFACTION ALWAYS USE  
FACTORY SPECIFICATION PARTS



**Whirlpool** CORPORATION

Benton Harbor, Michigan.

© 1988 WHIRLPOOL CORPORATION


12-88 Litho in U.S.A.

Part No. 3351485

3/92

# TOP AND CABINET PARTS

For Model: LA8800XTW0

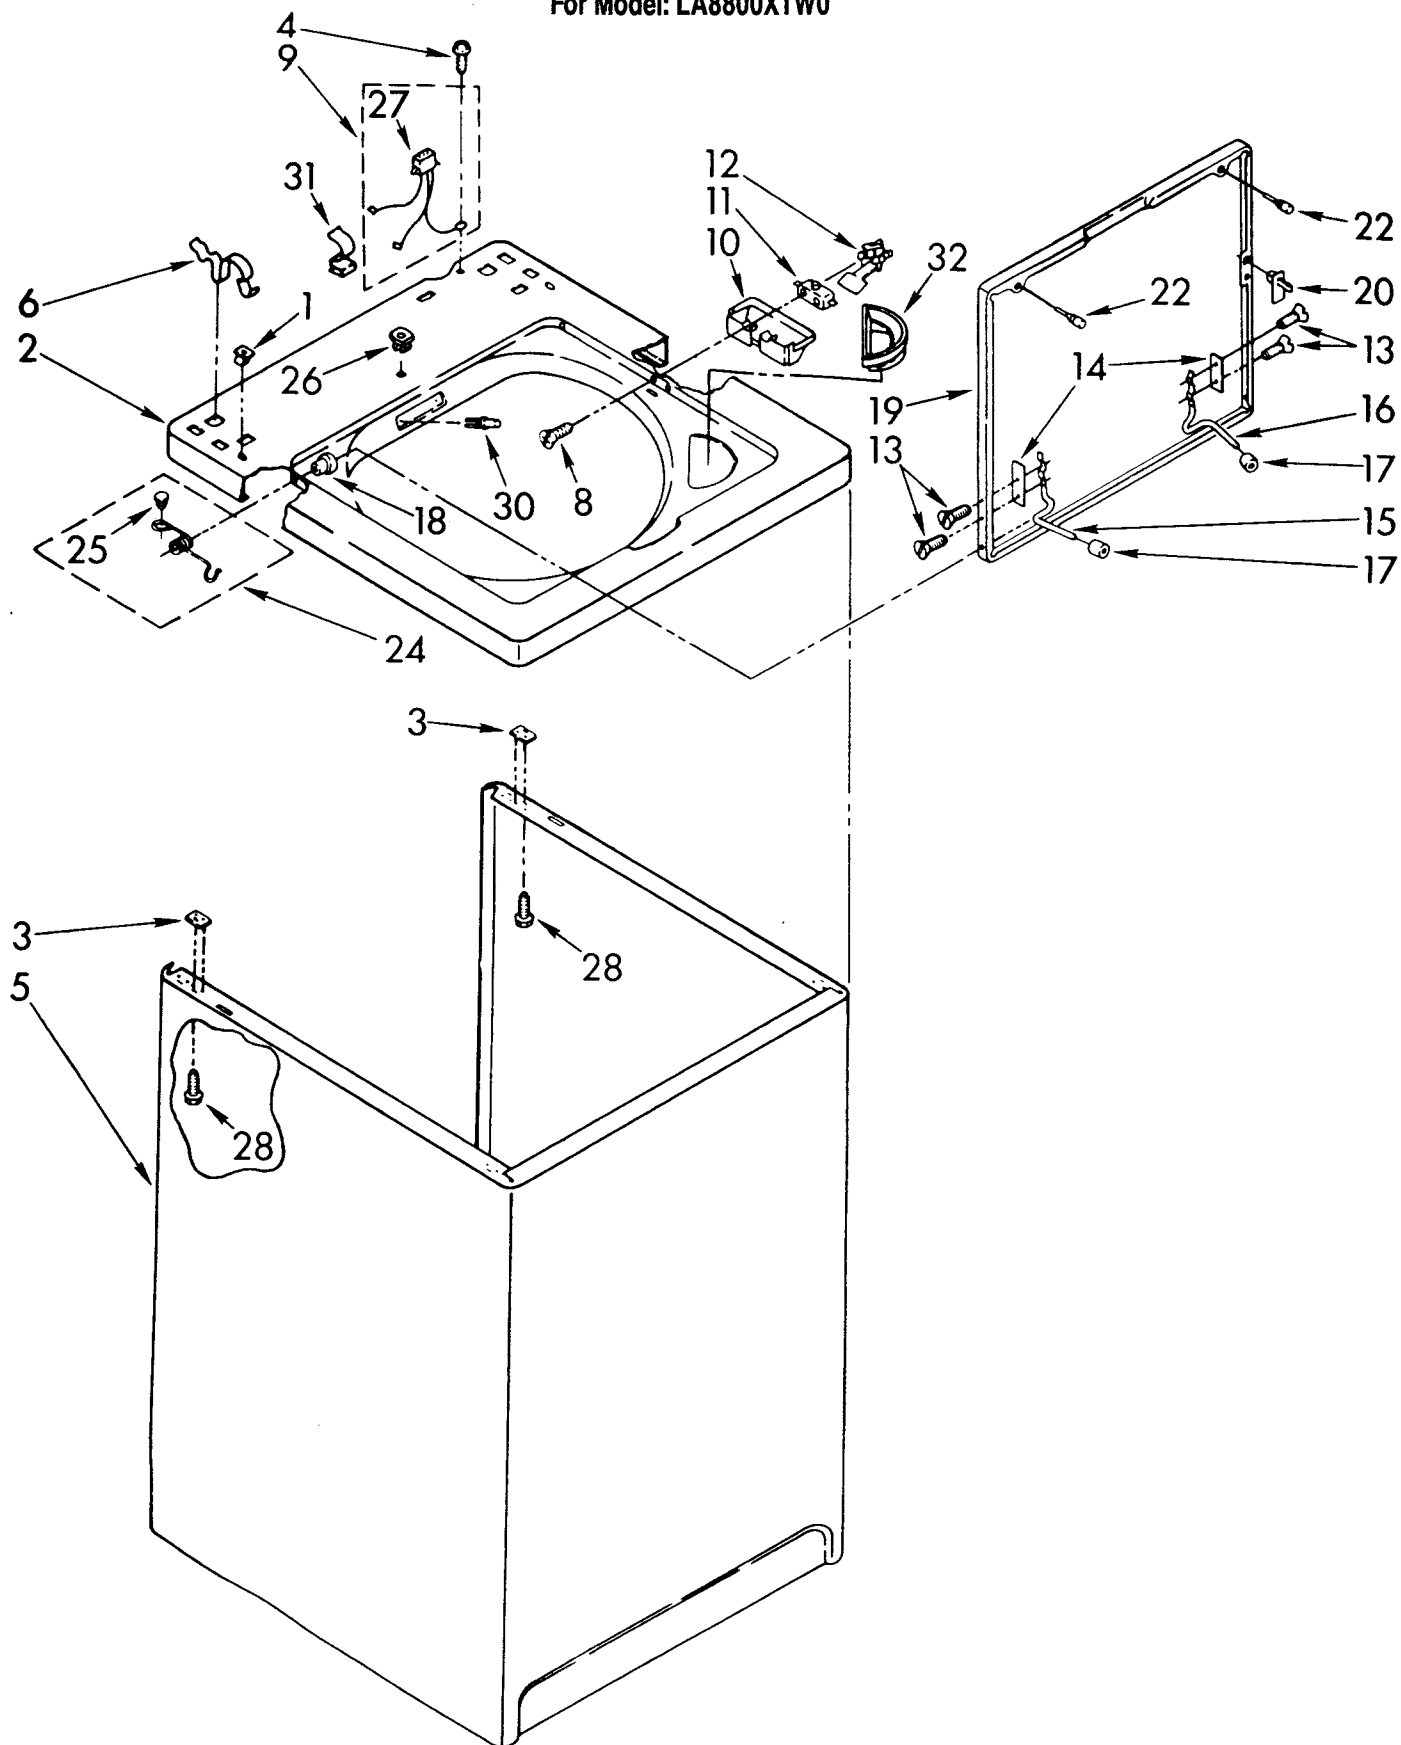

1	358473	Nut, Push-In (2)
2		Top
	388351	White
	388352	Almond
	388353	Toast
	388354	Platinum
	388355	Golden Harvest
3	62750	Spacer, Cabinet To Top (4)
4	687128	Screw, 10-16 x 1/2
5		Cabinet
	63424	White
	63425	Almond
	63426	Toast
	63427	Platinum
	63428	Golden Harvest
6	62780	Clip, Top & Cabinet & Rear Panel (2)
8	354764	Screw & Washer, Lid Switch (2)
9	63833	Harness, Lid Switch
10	359231	Shield, Lid Switch
11	661517	Switch, Lid
	388322	(Alt.)
	3347287	(Alt.)
	359230	(Alt.)
12	357347	Actuator, Lid Switch
13	3351355	Screw, Lid Hinge Mounting (4)
14	21097	Pad, Lid Hinge (2)
15	54584	Hinge, Lid (L.H.)
16	54583	Hinge, Lid (R.H.)
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19		Lid
	388450	White
	388451	Almond
	388453	Toast
	388452	Platinum
	388454	Golden Harvest
20	358684	Strike, Lid Switch
22	93770	Bumper, Lid (2)
24	3349948	Spring & Button, Lid
25	54690	Plug, Button
26	358472	Stop, Push-In Top
27	62888	Plug, Terminal (3-Way)
28	384435	Screw, 10-16 x 1/2 (4)
30	354239	Rivet, Serial Nameplate
31	90016	Clip, Harness
32	63289	Dispenser, Bleach

#### LITERATURE PARTS

LIT3351410	Guide, Laundry
LIT3347638	Label, Wiring Diagram
LIT3347019	Sheet, Installation Instructions
LIT3351546	Guide, Use and Care
LIT3351441	Energy Guide
LIT3351485	List, Repair Parts

OPTIONAL PARTS NOT INCLUDED

PAINT, TOUCH UP (1/2 oz.)

72017	White
72107	Almond
72112	Toast
72113	Platinum
72110	Golden Harvest

PAINT PRESSURIZED SPRAY (13 oz.)

350941	Leveler (Thinner)
350938	Primer, Gray
350930	White
350956	Almond
285365	Toast
285366	Platinum
261890	Golden Harvest

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)
261891	Golden Harvest (Uncut)

OIL

350572	Oil, Gearcase (16 Oz.)
--------	------------------------


LUBRICANT

285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)
--------	---

SEALER

285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
--------	-------------------------------------


**For Model: LA8800XTW0**



1	16123	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)
2	63162	Pin, Cabinet Guide (2)
3	660028	Hose, Inlet (2)
	81339	(Alt.)
	366108	(Alt.)
	385057	(Alt.)
5	387402	Hinge, Console (2)
6	3348430	Panel, Rear
7	62747	Pad, Rear Panel
8	387325	Hose, Corrugated Plastic Drain (5 1/2 Ft.)
	388418	Hose, Corrugated Plastic Drain (10 Ft.) (Not Included)
9	3347636	Timer, Control (60 Hz.)
10	63493	Motor, Timer
11	90767	Screw, 8A x 3/8
12	64103	Switch, Water Level
13	63687	Bracket, Control
14	62734	Cord, Power
15	63848	Strain Relief, Power Cord
16	63789	Cap, End (L.H.)
17	96160	Screen, Filter (2)
18	358992	Valve, Water Mixing
19	90864	Screw, 10-24 x 3/8 (2)
20	359262	Screw, Ground (10-16 x 1/2)
21	660635	Clamp, Hose
	272846	(Alt.)
	353367	(Alt.)
22	62662	Hose, Vacuum Break
23	371503	Clamp, Hose
24	387606	Break, Vacuum
25	63290	Support, Rear Panel
26	3349018	Connector, Drain Hose
27	272856	Clamp, Hose
28	3348552	Hose, Pump To Drain Connector
30	371502	Clamp, Hose
31	660628	Clamp, Hose
	272858	(Alt.)
	370447	(Alt.)
	353097	(Alt.)
32	62731	Hose, Pump To Tub
33	357030	Clamp, Capacitor
34	3348058	Capacitor, Motor Start (MFD 270, 110 Volts)
35	661530	Switch, Water Temperature
	3347790	(Alt.)
	3349348	(Alt.)
36	96435	Screw, Timer Mounting (10-32 x 1) (2)
37	386636	Knob, Water Level
38	688805	Clip, Control Knob
39	3348082	Panel, Console
40	689559	Nut, Push-In (2)
42	355326	Screw, 13-16 x 5/8 (4)
44	3347726	Knob, Timer
45	64140	Dial, Timer
47	3347773	Button, Push (5)
48	356138	Clamp, Hose
49	64211	Screw, 8-18 (2) (Panel to Top)
50	62863	Screw, 10-16 x 3/8
51	63795	Cap, End (R.H.)

52	343641	Screw, 10-16 x 1/2
54	364089	Wire, Ground
55	9416643	Screw, Hinge To Rear Panel (10-16 X 1/2) 2
56	3350222	Retainer, Wire
57	371504	Clamp, Hose
58	384496	Coupling, Hose
60	3348424	Shield, Suds
61	661524	Switch, Second Rinse
	3348102	(Alt.)
	3349096	(Alt.)
62	3348392	Gasket, Switch

## MISCELLANEOUS PARTS

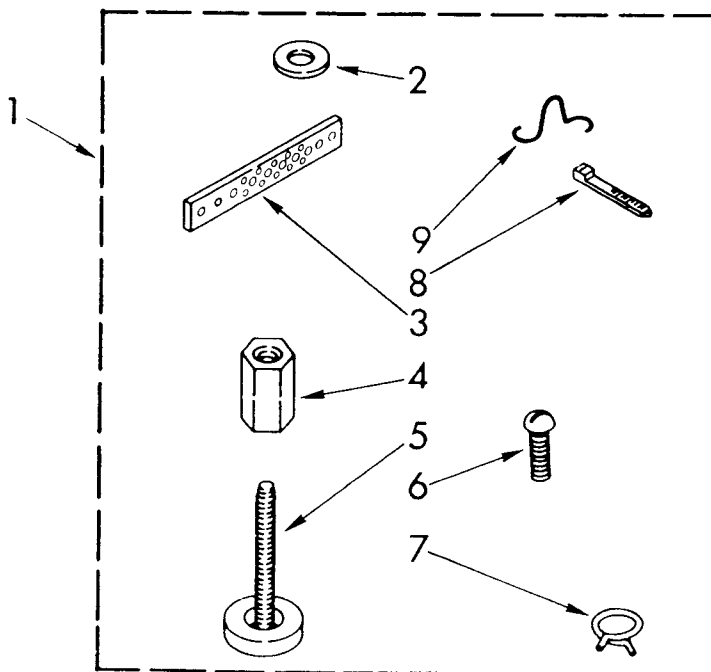




1	387980	Miscellaneous Parts Bag
2	16123	Washer, Inlet Hose (1-1/16 x 5/8) (4)
3	22965	Strap, Ground
4	62739	Nut, Lock (2) (3/8-16)
5	389102	Foot, Front (2)
6	132848	Screw, Ground (10-24 x 1)
7	356138	Clamp, Hose
8	3347868	Cable Tie
9	3350222	Retainer, Drain Hose




# AGITATOR, BASKET AND TUB PARTS

For Model: LA8800XTW0

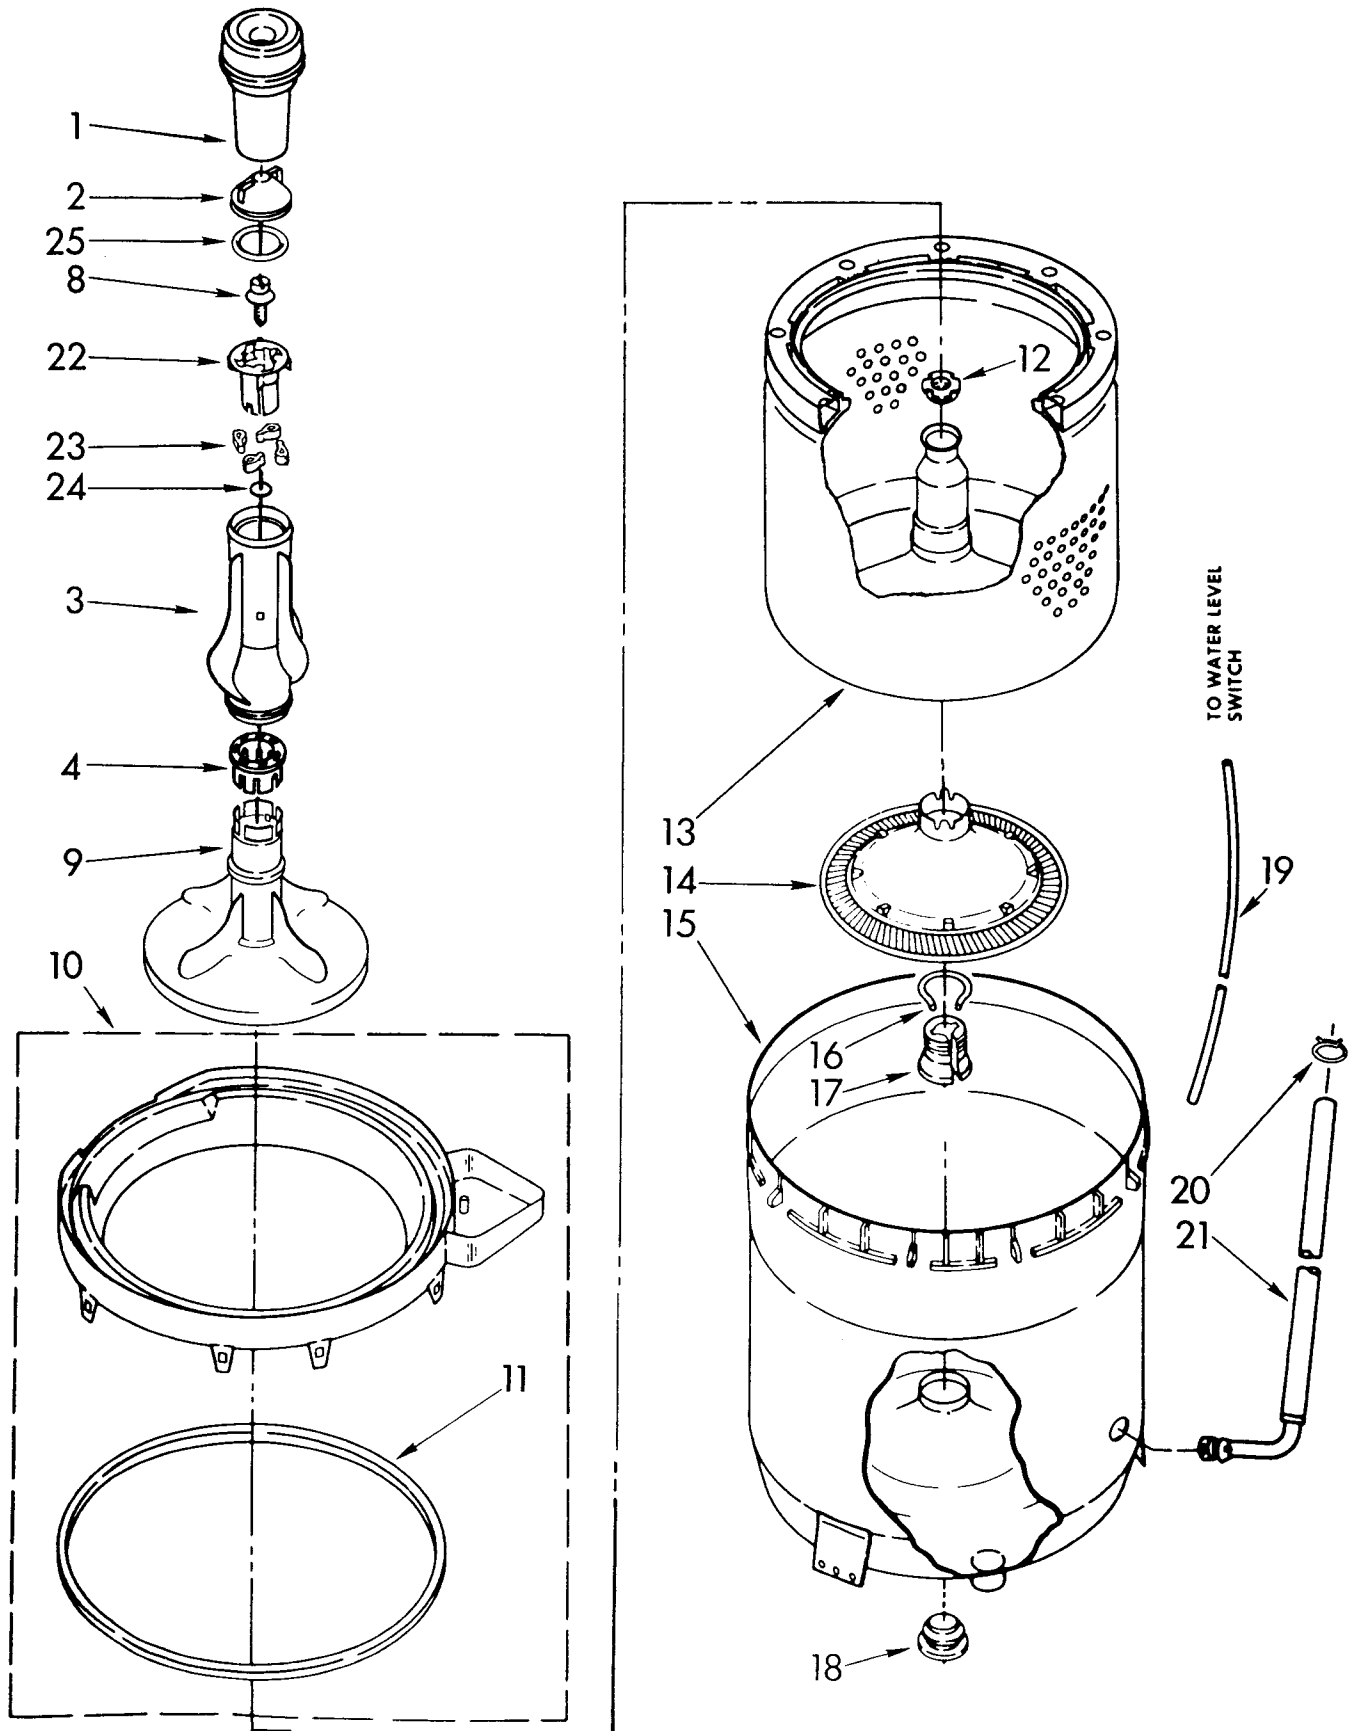

1	63580	Dispenser, Rinse
2	3347290	Cap, Barrier
3	3348752	Clothes Mover, Three Vane
4	3350389	Spacer, Thrust
8	358237	Screw and Washer
9	3347288	Agitator
10	63851	Tub Ring
11	63852	Gasket, Tub Ring
12	21366	Nut, Spanner
13	3350649	Basket
14	62941	Filter, Plate (Includes Illus. 16)
15	388893	Tub
16	62942	Lock, Filter
17	389140	Block, Drive
18	383727	Gasket, Centerpost
19	353406	Hose, Pressure Switch
20	356436	Clamp, Hose
21	63323	Hose, Bleach
22	3351001	Cam, Agitator
23	387091	Dog, Agitator Clutch (4)
24	357574	Seal, Agitator
25	3348855	Seal, Inner Auger

## WATER SYSTEM PARTS

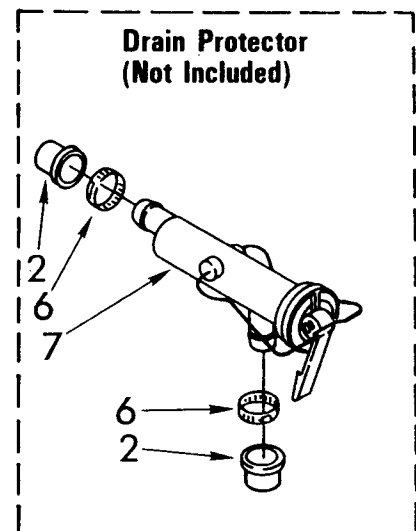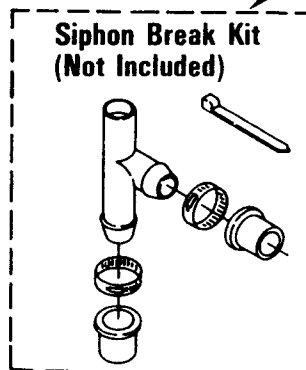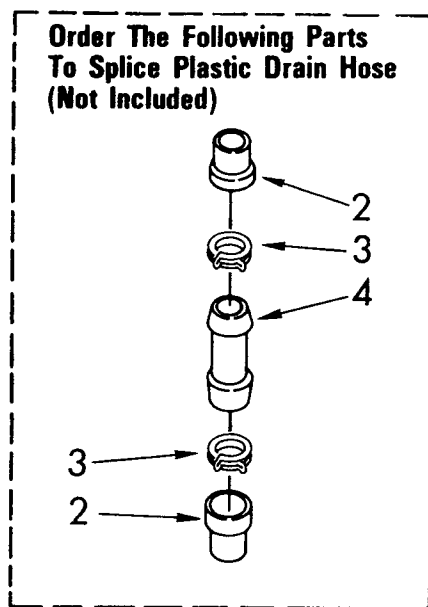


WS-400

1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

# BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Model: LA8800XTW0

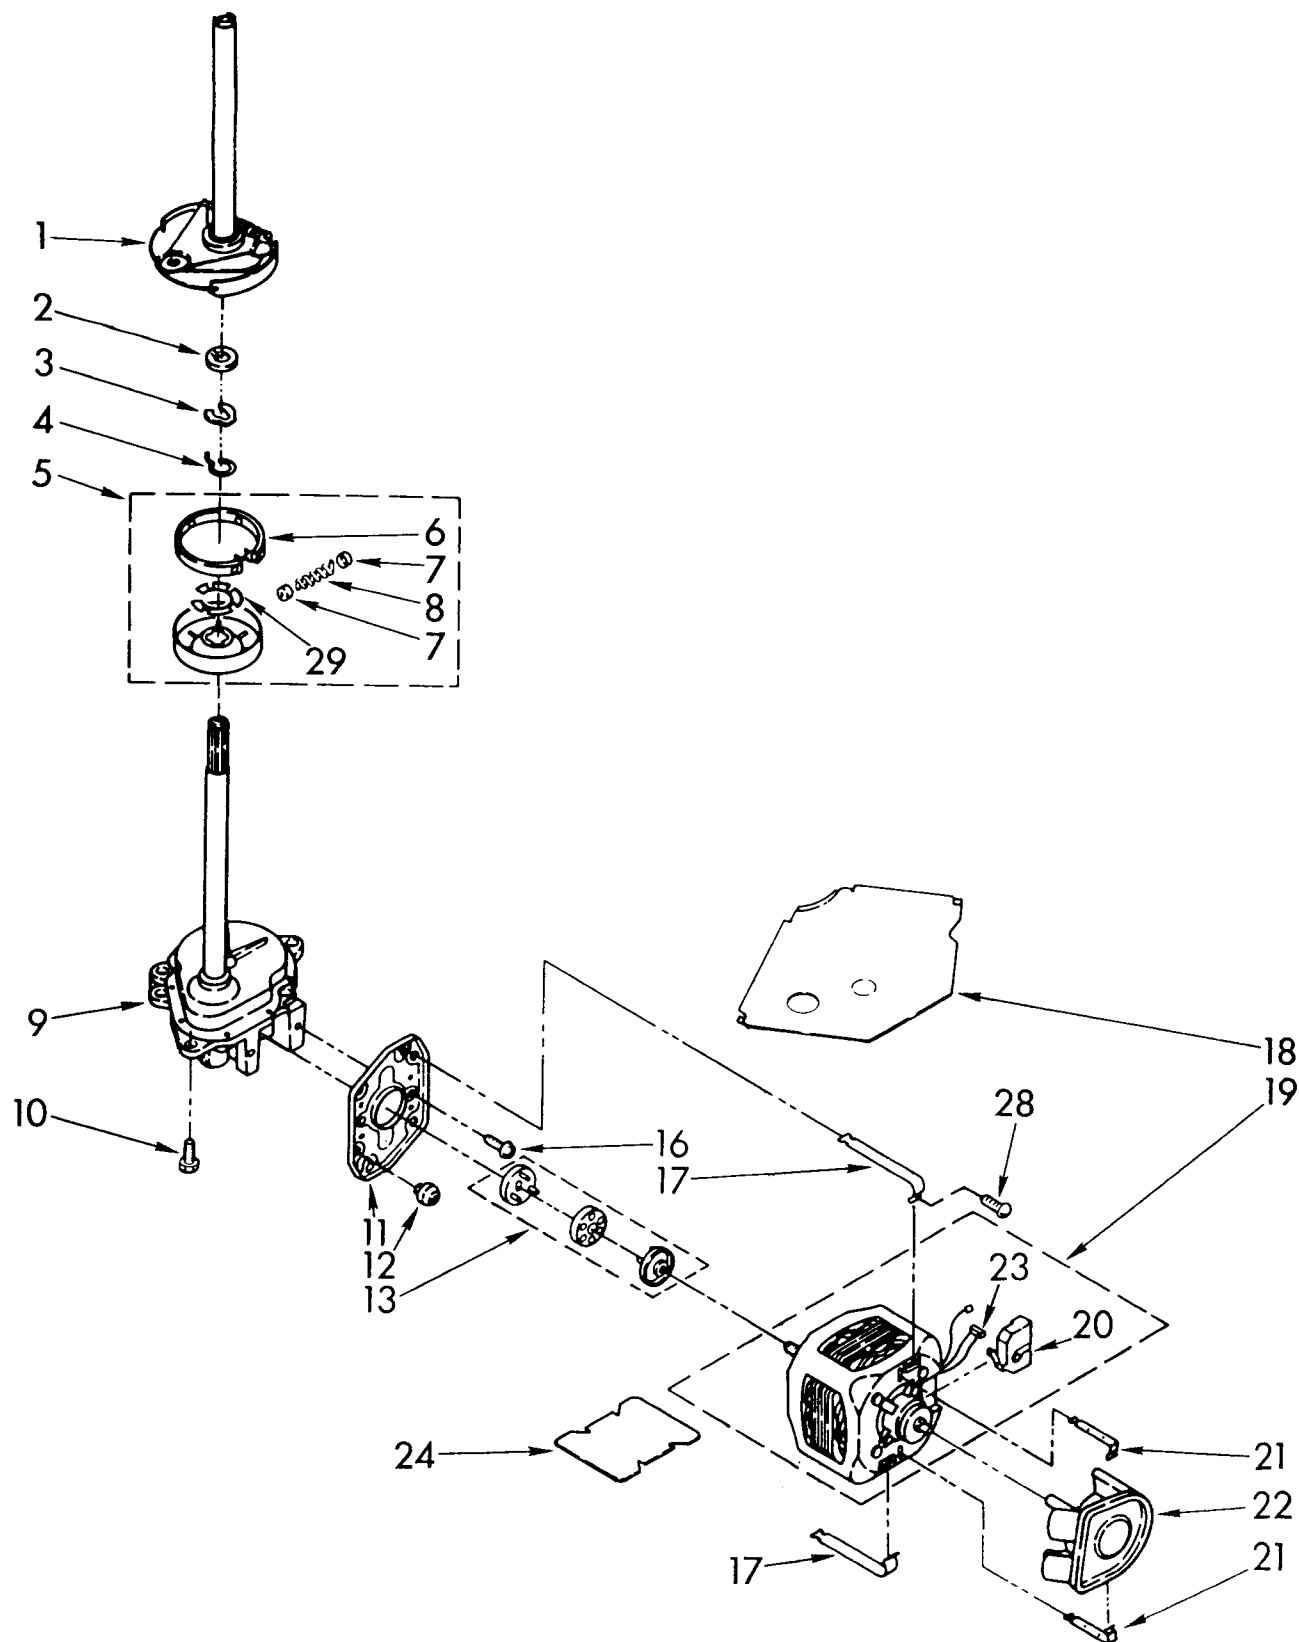

1	388952	Brake & Drive Tube (Complete) (Refer to Page For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3350115	Clutch (Complete)
6	388190	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	387712	Spring, Clutch
9	389246	Gearcase (Complete) (Refer To Page For Further Breakdown)
10	62735	Screw, Gearcase To Base (3) (5/16-24 x 3/4)
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	62693	Coupling, Motor And Isolation
16	98062	Screw, 5/16-24 x 5/8 (2)
17	3349637	Retainer, Motor (2)
18	3349282	Shield, Tub To Motor
19	3349640	Motor, Main Drive
20	62850	Switch, Main Drive Motor
21	62700	Retainer, Pump (2)
22	3348015	Pump (Complete)
23	3348074	Plug, Terminal
24	3351341	Shield, Motor
28	357640	Screw, 10-16 x 5/8 (2)
29	3350070	Clip (Anti-Rattle)

**For Model: LA8800XTW0**






1	98610	Screw, Bracket Mounting (10-16 x 5/8) (6)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring, Suspension (3)
4	389350	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	388492	Spring, Counterweight
16	62568	Pad, Plate
17	389299	Plate, Suspension (Includes Illus. 16)
18	62602	Pad, Base
19	389149	Base Assembly (Includes Illus, 6, 7, 8, 9, 18 & 26)
21	62739	Nut, Lock (3/8-16) (2)
22	389102	Foot, Front (2)
23	356934	Seal, Centerpost (2)
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring


# WIRING HARNESS PARTS

For Model: LA8800XTW0

## RETAINER CLIPS

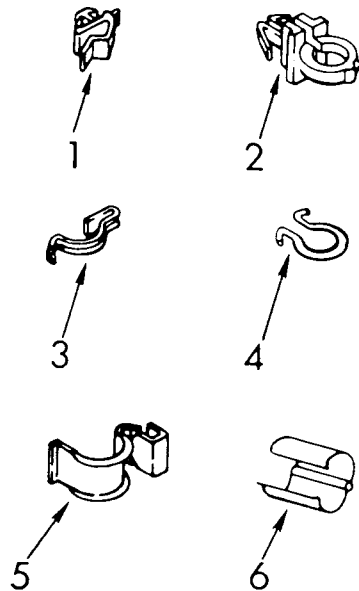

## WIRING HARNESS

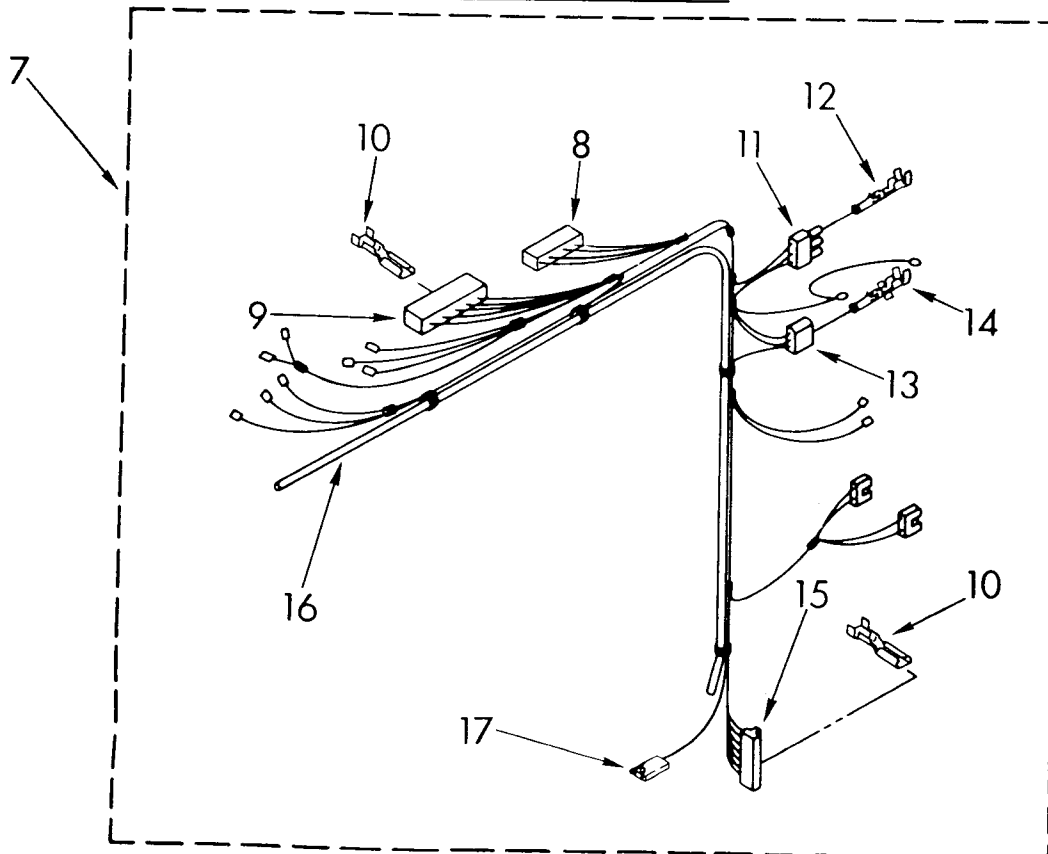

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	62732	Clip, Harness
2	62749	Clip, Harness
3	98997	Clip, Harness
4	387551	Clip, Harness (3)
5	90016	Clip, Harness
6	63523	Protector, Harness
7	3348080	Wiring Harness & Pressure Switch Hose
8	352090	Block, Disconnect
9	352089	Block, Disconnect (Black) (Timer)
10	352088	Terminal, Female
11	62889	Receptacle, Terminal (3-Way) (Lid Switch)
12	94614	Terminal, Female
13	353424	Plug, Terminal (3-Way) (Power Cord)
14	94613	Terminal, Male
15	62505	Block, Disconnect (Motor)
16	353406	Hose, Pressure Switch
17	3348075	Receptacle, Terminal (2 Way)

**For Model: LA8800XTW0**




1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED

285208	Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)
--------	---

# GEARCASE PARTS

For Model: LA8800XTW0

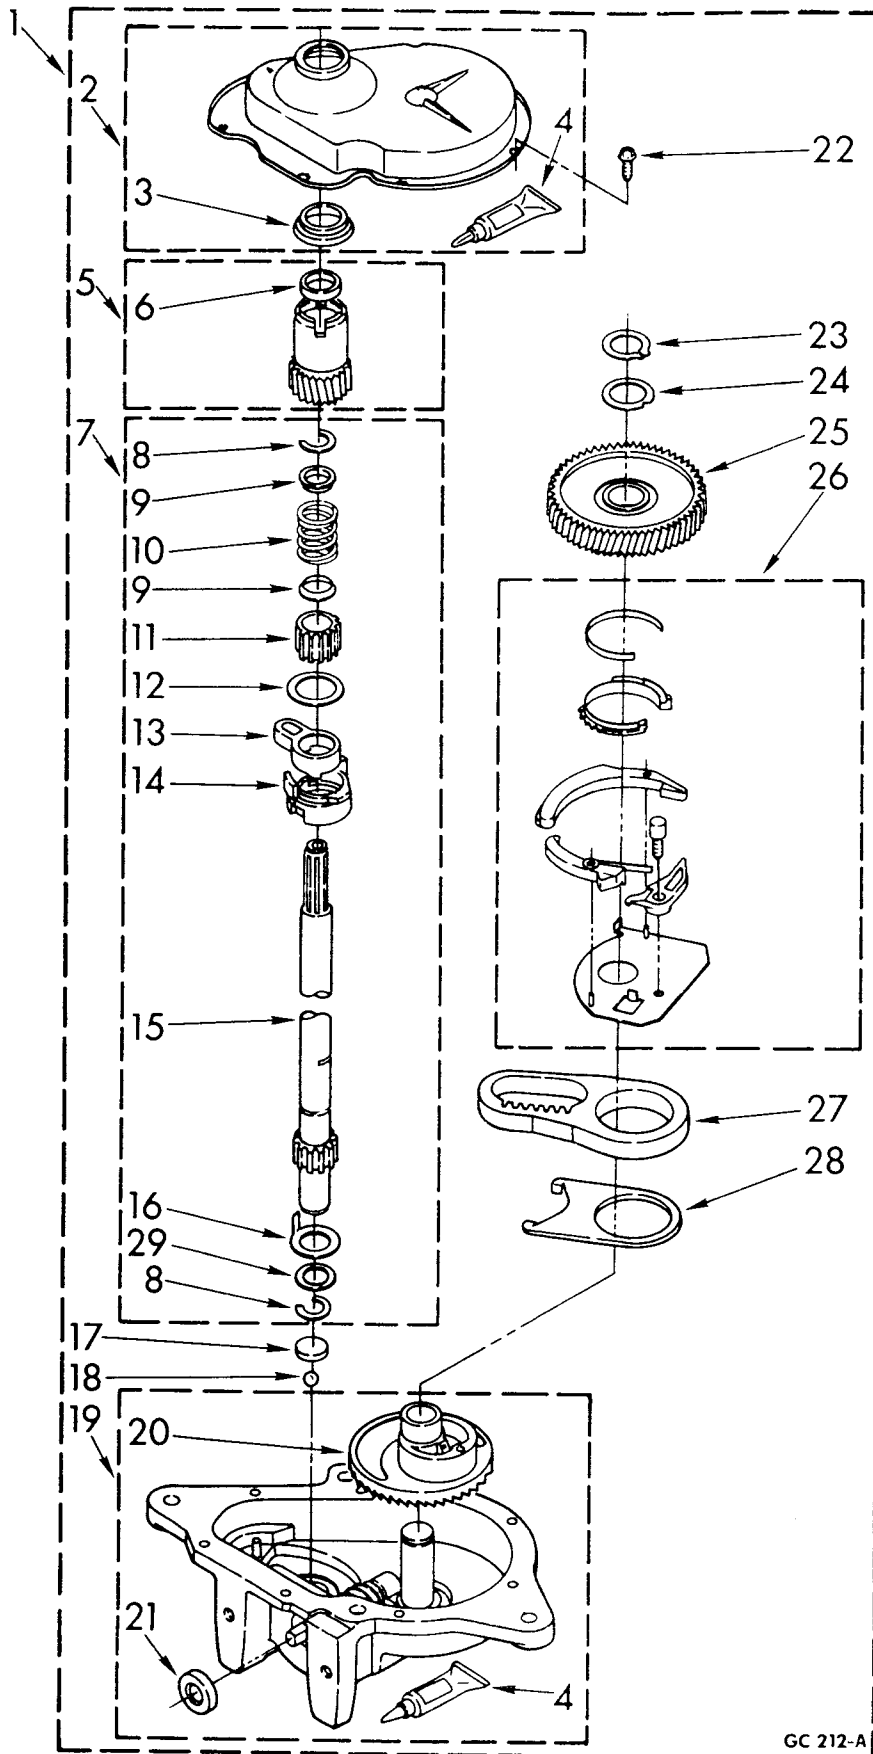

GC 212-A

1	389246	Gearcase (Complete)
2	62685	Cover, Gearcase
3	3347188	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring (2)
10	62676	Spring, Agitate
11	63273	Gear, Agitator
12	62619	Washer, Agitator Gear
13	62580	Follower, Cam
14	62581	Cam, Agitator
15	389231	Shaft, Agitator
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389229	Bottom and Pinion, Gearcase
20	62528	Gear, Main Drive
21	285352	Seal, Thrust Plug
22	90864	Screw, Gearcase Cover Mounting (8)
23	95082	Ring, Retaining
24	285292	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	62534	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediat